 
 
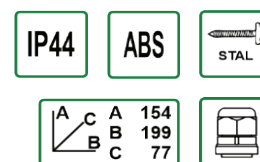 



ROZDZIELNICE R-190

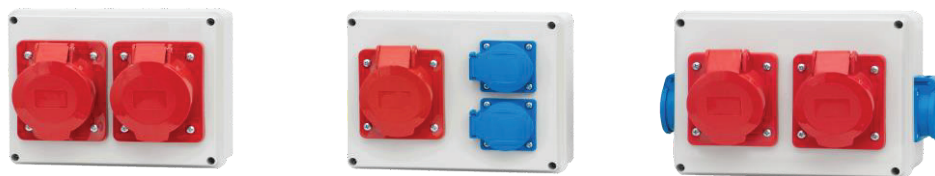


		Op.	J.m.
F3.0122	R-190 - gniazda 16A 5p, 32A 5p	1/1	szt.
F3.0123	R-190 - gniazda 2x16A 5p	1/1	szt.
F3.0124	R-190 - gniazda 2x32A 5p	1/1	szt.
F3.0085	R-190 - gniazda 16A 5p, 2x230V	1/1	szt.
F3.0086	R-190 - gniazda 32A 5p, 2x230V	1/1	szt.
F3.0307	R-190 - gniazda 16A 5p, 32A 5p, 2x230V	1/1	szt.
F3.0308	R-190 - gniazda 2x16A 5p, 2x230V	1/1	szt.
F3.0309	R-190 - gniazda 2x32A 5p, 2x230V	1/1	szt.

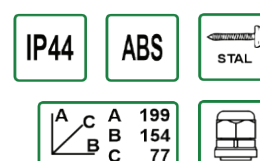

		Op.	J.m.
F3.0121	R-190 - gniazda 4x230V	1/1	szt.
F3.0264	R-190 - gniazda 6x230V	1/1	szt.

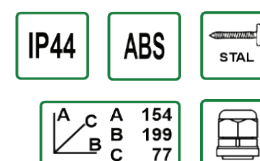 

		Funkcja	Op.	J.m.
F3.0774	R-190 - gniazda 16A 3p	wyłącznika	0/1 (16A)	1/1 szt.
F3.0775	R-190 - gniazda 32A 3p		0/1 (25A)	1/1 szt.
F3.0776	R-190 - gniazda 16A 5p		0/1 (16A)	1/1 szt.
F3.0777	R-190 - gniazda 32A 5p		0/1 (25A)	1/1 szt.
F3.0778	R-190 - gniazda 16A 5p	L/P (16A)	1/1	szt.
F3.0779	R-190 - gniazda 32A 5p	L/P (25A)	1/1	szt.

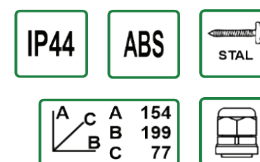 

		Funkcja	Op.	J.m.
F3.0780	R-190 - gniazda 16A 3p, 230V	wyłącznika	0/1 (16A)	1/1 szt.
F3.0781	R-190 - gniazda 32A 3p, 230V		0/1 (25A)	1/1 szt.
F3.0087	R-190 - gniazda 16A 5p, 230V		0/1 (16A)	1/1 szt.
F3.0088	R-190 - gniazda 32A 5p, 230V		0/1 (25A)	1/1 szt.
F3.0089	R-190 - gniazda 16A 5p, 230V	L/P (16A)	1/1	szt.
F3.0090	R-190 - gniazda 32A 5p, 230V	L/P (25A)	1/1	szt.