 
 
 



ROZDZIELNICE R-310

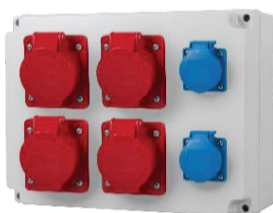


		Op.	J.m.
<b>F3.0341</b>	R-310 - gniazda 2x16A 5p, 2x32A 5p, 2x230V	1/1	szt.
<b>F3.0342</b>	R-310 - gniazda 4x16A 5p, 2x230V	1/1	szt.
<b>F3.0343</b>	R-310 - gniazda 4x32A 5p, 2x230V	1/1	szt.



		Funkcja	Op.	J.m.
<b>F3.0344</b>	R-310 - gniazda 3x16A 5p, 3x230V	wyłącznika	1/1	szt.
<b>F3.0346</b>	R-310 - gniazda 3x32A 5p, 3x230V	wyłącznika	1/1	szt.
<b>F3.0345</b>	R-310 - gniazda 3x16A 5p, 3x230V	L/P (63A)	1/1	szt.
<b>F3.0347</b>	R-310 - gniazda 3x32A 5p, 3x230V	L/P (63A)	1/1	szt.

 

		Funkcja	Op.	J.m.
<b>F3.0355</b>	R-310 - gniazda 2x16A 5p, 4x230V	wyłącznika	1/1	szt.
<b>F3.0357</b>	R-310 - gniazda 2x32A 5p, 4x230V	wyłącznika	1/1	szt.
<b>F3.0356</b>	R-310 - gniazda 2x16A 5p, 4x230V	L/P (32A)	1/1	szt.
<b>F3.0358</b>	R-310 - gniazda 2x32A 5p, 4x230V	L/P (32A)	1/1	szt.

 

		Funkcja	Op.	J.m.
<b>F3.0294</b>	R-310 - gniazda 63A 5p	wyłącznika	1/1	szt.
<b>F3.0295</b>	R-310 - gniazda 63A 5p, 230V z bezpiecznikiem	wyłącznika	1/1	szt.
<b>F3.0296</b>	R-310 - gniazda 63A 5p, 2x230V z bezpiecznikiem	wyłącznika	1/1	szt.
<b>F3.0297</b>	R-310 - gniazda 63A 5p	L/P (63A)	1/1	szt.
<b>F3.0298</b>	R-310 - gniazda 63A 5p, 230V z bezpiecznikiem	L/P (63A)	1/1	szt.
<b>F3.0299</b>	R-310 - gniazda 63A 5p, 2x230V z bezpiecznikiem	L/P (63A)	1/1	szt.