

ROZDZIELNICE CAJA 11M



 
		Moduły	Op.	J.m.
F3.0411	Obudowa CAJA 11M	11 modułów	1/1	szt.
F3.0396	CAJA 11M - gniazda 16A 5p, 3x32A 5p	11 modułów	1/1	szt.
F3.0394	CAJA 11M - gniazda 2x16A 5p, 2x32A 5p	11 modułów	1/1	szt.
F3.0395	CAJA 11M - gniazda 3x16A 5p, 32A 5p	11 modułów	1/1	szt.
F3.0392	CAJA 11M - gniazda 4x16A 5p	11 modułów	1/1	szt.
F3.0393	CAJA 11M - gniazda 4x32A 5p	11 modułów	1/1	szt.



		Moduły	Op.	J.m.
F3.0400	CAJA 11M - gniazda 16A 5p, 32A 5p, 3x230V	11 modułów	1/1	szt.
F3.0401	CAJA 11M - gniazda 2x16A 5p, 3x230V	11 modułów	1/1	szt.
F3.0402	CAJA 11M - gniazda 2x32A 5p, 3x230V	11 modułów	1/1	szt.
F3.0397	CAJA 11M - gniazda 16A 5p, 32A 5p, 4x230V	11 modułów	1/1	szt.
F3.0398	CAJA 11M - gniazda 2x16A 5p, 4x230V	11 modułów	1/1	szt.
F3.0399	CAJA 11M - gniazda 2x32A 5p, 4x230V	11 modułów	1/1	szt.



F3.0403	CAJA 11M - gniazda 3x16A 5p, 2x230V	11 modułów	1/1	szt.
F3.0404	CAJA 11M - gniazda 3x32A 5p, 2x230V	11 modułów	1/1	szt.



		Funkcja	Moduły	Op.	J.m.
F3.0405	CAJA 11M - gniazda 16A 5p, 32A 5p, 2x230V	0/1 (32A)	11 modułów	1/1	szt.
F3.0407	CAJA 11M - gniazda 2x16A 5p, 2x230V	0/1 (32A)	11 modułów	1/1	szt.
F3.0409	CAJA 11M - gniazda 2x32A 5p, 2x230V	0/1 (32A)	11 modułów	1/1	szt.
F3.0406	CAJA 11M - gniazda 16A 5p, 32A 5p, 2x230V	L/P (32A)	11 modułów	1/1	szt.
F3.0408	CAJA 11M - gniazda 2x16A 5p, 2x230V	L/P (32A)	11 modułów	1/1	szt.
F3.0410	CAJA 11M - gniazda 2x32A 5p, 2x230V	L/P (32A)	11 modułów	1/1	szt.