

Individual configuration of distribution box



Key for marking ROS 16yy, 32yy and ROS P

Example of marking **ROS -I 16 03 A / S**

- unprotected
- P** – Praktik
- PG** – Praktik with degree of protection IP 67
- I** – protected
- FI** – protected + current protector

16, 32 – nominal current 16A, 32A

number combination of fitting

- A** – with possibility of protection (without breakers)
- D** – with handle
- D/A** – with handle with possibility of protection (without breakers)

S – Schuko version

Sign „A“

Protected distribution box without the circuit breakers with prepared wires to connect the circuit breakers according to the recommended and attached connection scheme. The socket outlets are not wired separately for particular connection to the individual circuit breakers, they are looped together. Circuit breakers must be used.

Key for marking ROS Modul

Example of marking **ROS M13 / EM -035 / S**

- M6** – 6 modules
- M8** – 8 modules
- M13** – 16 modules
- M32** – 32 modules

- x** – unprotected
- I** – protected
- FI** – protected + current protector
- EM** – electrometer

number combination of fitting

S – Schuko version

Key for marking ROS 4, 5-6, 7, 11, 13

Example of marking **ROS 11 / FI-01 EM / A / S**

4,5-6,7,11,13 – number of modules

- x** – unprotected
- I** – protected
- FI** – protected + current protector
- V** – with switch

number combination of fitting

- EM** – electrometer

- /A** – with possibility of protection (without breakers)

S – Schuko version

Sign „/A“

Distribution box without the circuit breakers, yet fully equipped with wires to connect the circuit breakers according to the recommended and attached connection scheme. The socket outlets are wired separately for particular connection to the individual circuit breakers and also to the N and PE bridges (without looping, the difference compared to ROS-I 16xx A, 32xx A). Circuit breakers must be used.

Sign „/x“

Distribution box without the circuit breakers with prepared wires to connect the common circuit breaker (one) of a specific brand according to customer's preferences. However, the customer needn't necessarily use the circuit breaker and can connect the power cable directly into the prepared power inlet terminals. The socket outlets are looped together for this usage.

Key for marking ROP and VZS

Example of marking **ROP 16 5 3 -2xVZ / S**

ROP, VZS – type

16, 32 – nominal current 16A, 32A

4,5 = 4-poles, 5-poles

number combination of fitting

VZ – number of VZ 16

S – Schuko version

 
Individual configuration of distribution boxes

Except of distribution boxes in the catalog that we are able to supply the ROSes on demand. According to request of the user, it is possible to supply any other the permissible combinations. Examples of „custom distribution boxes“:







Distribution box ROS 11 IP 54

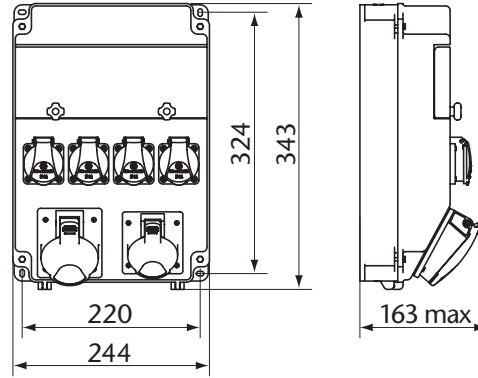

 
ROS 11/x with possibility of protection (with window without breakers) - IP 54

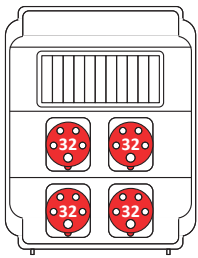


ROS 11/x-01

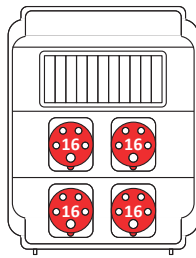 


ROS 11/x-03

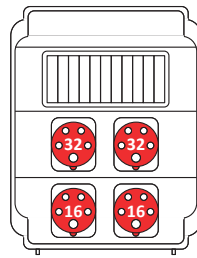 


ROS 11/x-05

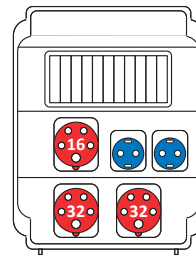 


ROS 11/x-11/S

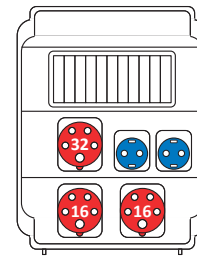 


ROS 11/x-14/S

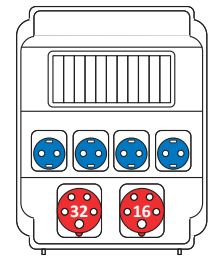 


ROS 11/x-21/S

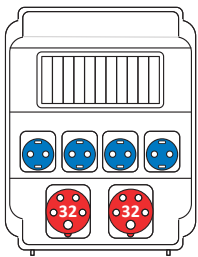 


ROS 11/x-22/S

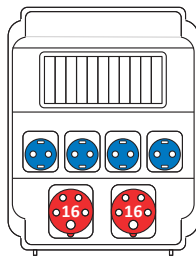 


ROS 11/x-23/S

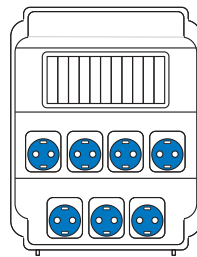 


ROS 11/x-25/S

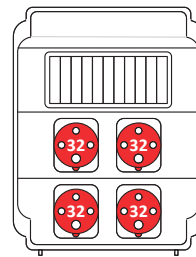 


ROS 11/x-41

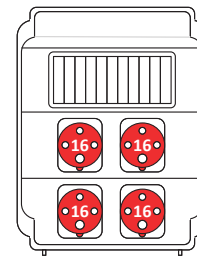 


ROS 11/x-43

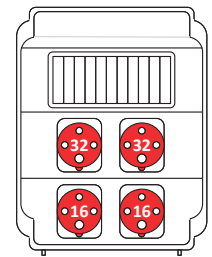 


ROS 11/x-45

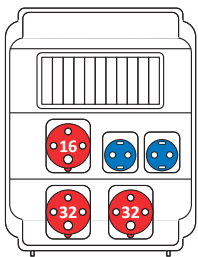 


ROS 11/x-51/S

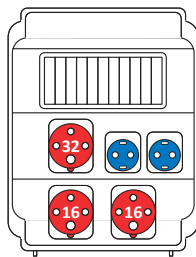 


ROS 11/x-54/S

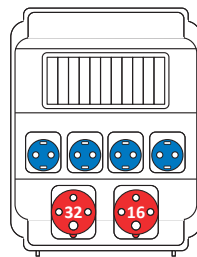 


ROS 11/x-61/S

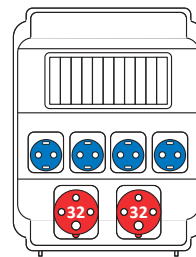 

ROS 11/x-62/S

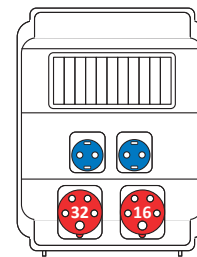 

ROS 11/x-632/A/S

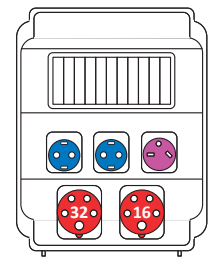 

ROS 11/x-32/24V/S